
R8C/Tiny Series

General-purpose Program for Variable Vector Table

1. Abstract

This program shows an example for setting variable vector tables and an example for using software interrupts.

2. Introduction


This program is an example using R8C/10 group microcomputers.

A variable vector table is a 256-byte interrupt vector table whose start address (IntBase) is indicated by the content of the interrupt table register (INTB). The variable vector table in this program has its start address at 0D000H. The variable vector table has individual vector tables each comprised of 4 bytes, and each vector table contains the start address of an interrupt routine.

There are software interrupt numbers (0 to 63) available for each vector table. The INT instruction uses these software interrupt numbers. No labels can be used in place of the software interrupt numbers. Peripheral I/O interrupts are assigned software interrupt numbers 0 to 31. In this program, software interrupt number 22 is used for timer X and software interrupt number 23 is used for timer Y. Software interrupt numbers 32 to 63 are used for software interrupts. This type of interrupt is generated by the INT instruction. Therefore, software interrupts are used in the same way as a subroutine by using the INT instruction. The INT instruction is executed even when interrupts are disabled. After interrupts are disabled (FCLR I) in this program, INT#23 and INT#32 are executed regardless of whether or not the interrupt enable flag (I) is set.

This program can also be used when operating other microcomputers within the R8C /10 group, provided they have the same vector table as the R8C microcomputers. However, some functions may have been modified. Refer to the User's Manual for details. Use functions covered in this Application Note only after careful evaluation.

3. Flowchart

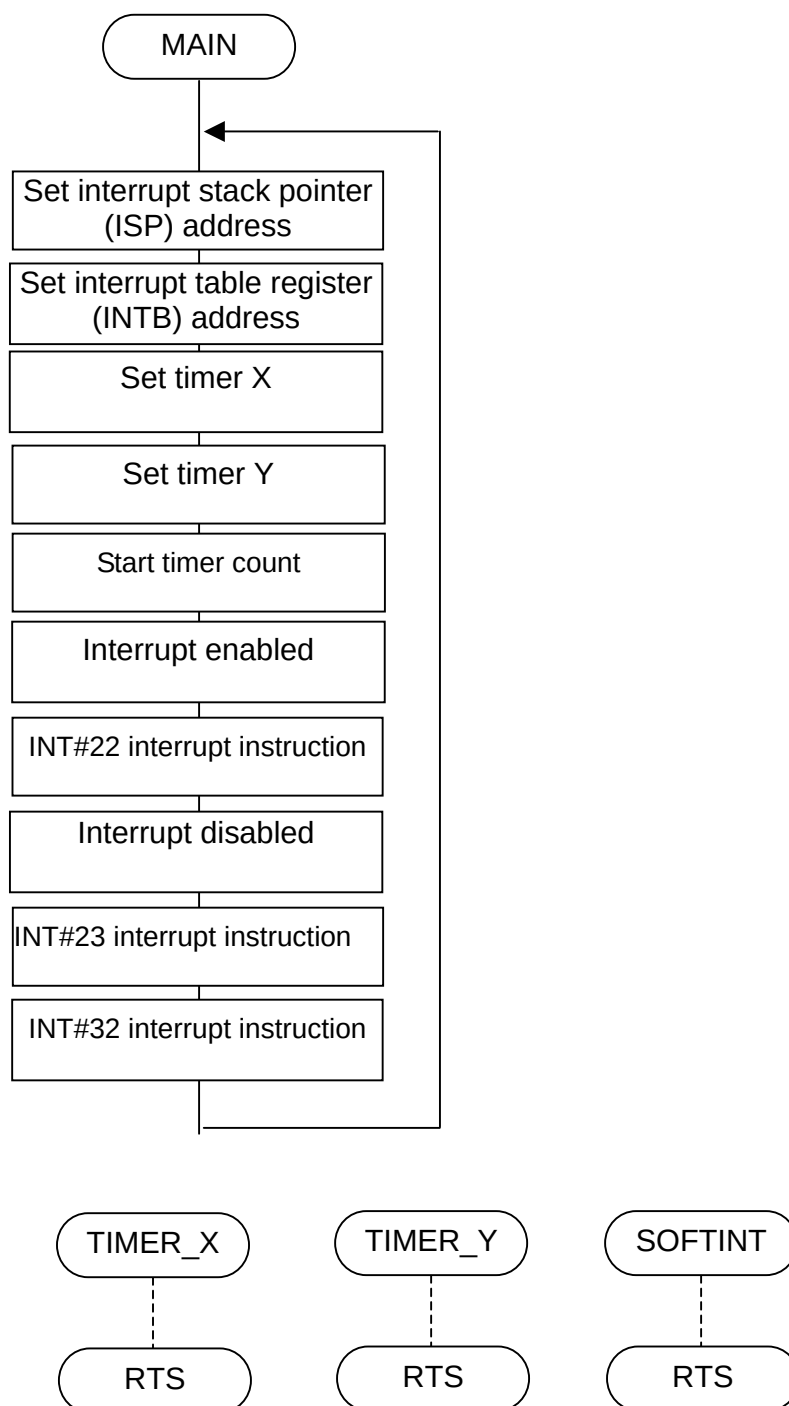

4. The example of a reference program

```

        .include  sfr_r811.inc          ; special page include file
;*****
;
;
;   R8C Program Collection No. 33      *
;
;   CPU      : R8C/Tiny                *
;
;*****
;*****
VromTOP      .EQU      00D100H          ; Declares start address of ROM
Vlstack      .EQU      000660h          ; Interrupt stack pointer
Vintbase     .EQU      00D000h          ; Declares interrupt vector table address
FIX_VECTOR.EQU      00FFDCh          ; Declares fixed interrupt vector address
;
;
;=====
;   Title: Variable vector table
;   Outline: Description example of variable vector table and software interrupt
;=====
;
        .SECTION  PROGRAM, CODE        ;
        .ORG      VromTOP              ; ROM area
MAIN:
        LDC      #Vlstack, ISP          ; Sets interrupt stack pointer
        LDINTB   #Vintbase              ; Sets interrupt table register
;
;
        mov.B    #00000000b, tcss       ; Timer Source select register
        MOV.B    #00000000B, txmr       ; Timers X mode Register
        mov.B    #00000000b, tyzmr      ; TimerY/Z mode Register
;
;
        MOV.W    #100-1, prex           ; Sets timer X counter
        MOV.B    #00000001B, txic       ; Sets interrupt level 1 for timer A0
        MOV.W    #0E7h, prey           ; Sets timer Y counter
        MOV.B    #3h, typr              ; Sets timer Y counter
        MOV.B    #0, tysc               ; Sets timer Y counter
        MOV.B    #00000010B, tyic       ; Sets interrupt level 2 for timer A1
;
;
        BSET     txs                    ; Timers X start counting
        BSET     tys                    ; Timers Y start counting
;
;
        FSET     I                      ; Enables interrupts
;
;
        INT      #22                    ; Performs timer X interrupt processing
;
;                                     ; (TIMER_A0 is executed)
;
;
        FCLR     I                      ; Disables interrupts
;
;
        INT      #23                    ; Performs timer Y interrupt processing
;
;                                     ; (TIMER_A1 is executed)
;
;
        INT      #32                    ; Performs SOFTINT label interrupt processing

```

```

;          (Here is your program.)
        jmp MAIN

TIMER_X:                                ;

;          (Here is your program.)

        REIT                            ;
TIMER_Y:                                ;

;          (Here is your program.)

        REIT                            ;
SOFTINT:                                ;

;          (Here is your program.)

        REIT                            ;
NOTUSE:                                ;

;          (Here is your program.)

        REIT                            ;
;                                          ;
;          .SECTION    SPECIAL,ROMDATA    ;
;          .ORG        Vintbase           ; Variable vector table area
;-----;
;    Peripheral I/O interrupt vector table
;-----;

        .word    NOTUSE                ; BRK instruction        (vector 0)
        .org     (Vintbase+52)
        .word    NOTUSE                ; Key input interrupt    (vector 13)
        .word    NOTUSE                ; A-D                    (vector 14)
        .org     (Vintbase+68)
        .word    NOTUSE                ; UART0 transmit        (vector 17)
        .word    NOTUSE                ; UART0 receive         (vector 18)
        .word    NOTUSE                ; UART1 transmit        (vector 19)
        .word    NOTUSE                ; UART1 receive         (vector 20)
        .word    NOTUSE                ; INT2                  (vector 21)
        .word    TIMER_X                ; Timer X               (vector 22)
        .word    TIMER_Y                ; Timer Y               (vector 23)
        .word    NOTUSE                ; Timer Z               (vector 24)
        .word    NOTUSE                ; INT1                  (vector 25)
        .word    NOTUSE                ; INT3                  (vector 26)
        .word    NOTUSE                ; Timer C               (vector 27)
        .org     (Vintbase+116)
        .word    NOTUSE                ; INT0                  (vector 29)
        .org     (Vintbase+128)
        .word    SOFTINT                ; vector 32 (for user or MR30)
        .word    NOTUSE                ; vector 33 (for user or MR30)

```

```

.word    NOTUSE          ; vector 34 (for user or MR30)
.word    NOTUSE          ; vector 35 (for user or MR30)
.word    NOTUSE          ; vector 36 (for user or MR30)
.word    NOTUSE          ; vector 37 (for user or MR30)
.word    NOTUSE          ; vector 38 (for user or MR30)
.word    NOTUSE          ; vector 39 (for user or MR30)
.word    NOTUSE          ; vector 40 (for user or MR30)
.word    NOTUSE          ; vector 41 (for user or MR30)
.word    NOTUSE          ; vector 42 (for user or MR30)
.word    NOTUSE          ; vector 43 (for user or MR30)
.word    NOTUSE          ; vector 44 (for user or MR30)
.word    NOTUSE          ; vector 45 (for user or MR30)
.word    NOTUSE          ; vector 46 (for user or MR30)
.word    NOTUSE          ; vector 47 (for user or MR30)
.LWORD   NOTUSE          ; Software interrupt number 0
.LWORD   NOTUSE          ; Software interrupt number 1
;
;
.section  INTER,ROMDATA  ; Declares FOMDATA attribute section of section name "INTER"
.org     FIX_VECTOR      ; Sets location to FFFDCH
.LWORD   NOTUSE          ; FFFDC to F Undefined instruction
.LWORD   NOTUSE          ; FFFE0 to 3 Overflow
.LWORD   NOTUSE          ; FFFE4 to 7 BRK instruction
.LWORD   NOTUSE          ; FFFE8 to B Address coincidence
.LWORD   NOTUSE          ; FFEC to F Single stepping
.LWORD   NOTUSE          ; FFFF0 to 3 Watchdog timer
.LWORD   NOTUSE          ; FFFF4 to 7 Debugger
.LWORD   NOTUSE          ; FFFF8 to B NMI
.LWORD   MAIN            ; FFFFC to F Reset
;
;
.end

```

5. Reference

HARDWARE MANUAL

R8C/10 group HARDWARE MANUAL

(Acquire the most current version from Renesas web-site)

6. Web-site and contact for support

Renesas Web-site

<http://www.renesas.com>

Contact for M16C family microcomputer technical support

Mail to : support_apl@renesas.com

REVISION HISTORY

Rev.	Date	Description	
		Page	Summary
1.00	Dec 29, 2003	-	First edition issued

Keep safety first in your circuit designs!

1. Renesas Technology Corporation puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage.
Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corporation product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation or a third party.
2. Renesas Technology Corporation assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor for the latest product information before purchasing a product listed herein.
The information described here may contain technical inaccuracies or typographical errors.
Renesas Technology Corporation assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
Please also pay attention to information published by Renesas Technology Corporation by various means, including the Renesas Technology Corporation Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corporation semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corporation is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
8. Please contact Renesas Technology Corporation for further details on these materials or the products contained therein.